

Remove VE Commodore Headlights

Step 1

First you will need to remove the front bumper.




Step 2

Remove the two bolts holding the black plastic shield in place.



Step 3

Remove the two bolts securing the bottom headlight brackets.

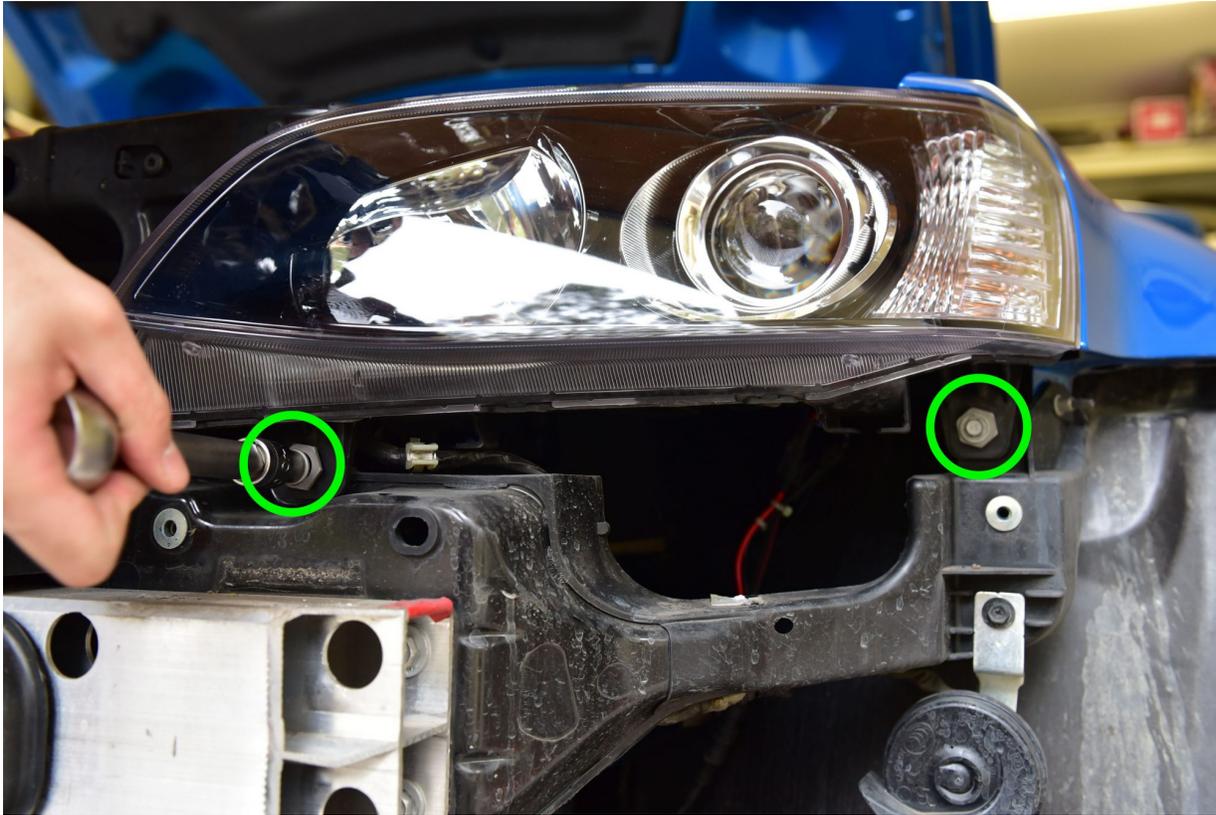

Step 4

Remove the two bolts securing the upper headlight brackets. Ensure you are holding the headlight as you remove the final bolt, it will now be loose.




Step 5

Gently pull out the headlight. We now need to unclip the wiring harness.



Step 6

To unplug the harness, pull the red tab upwards and gently pull out the plug.

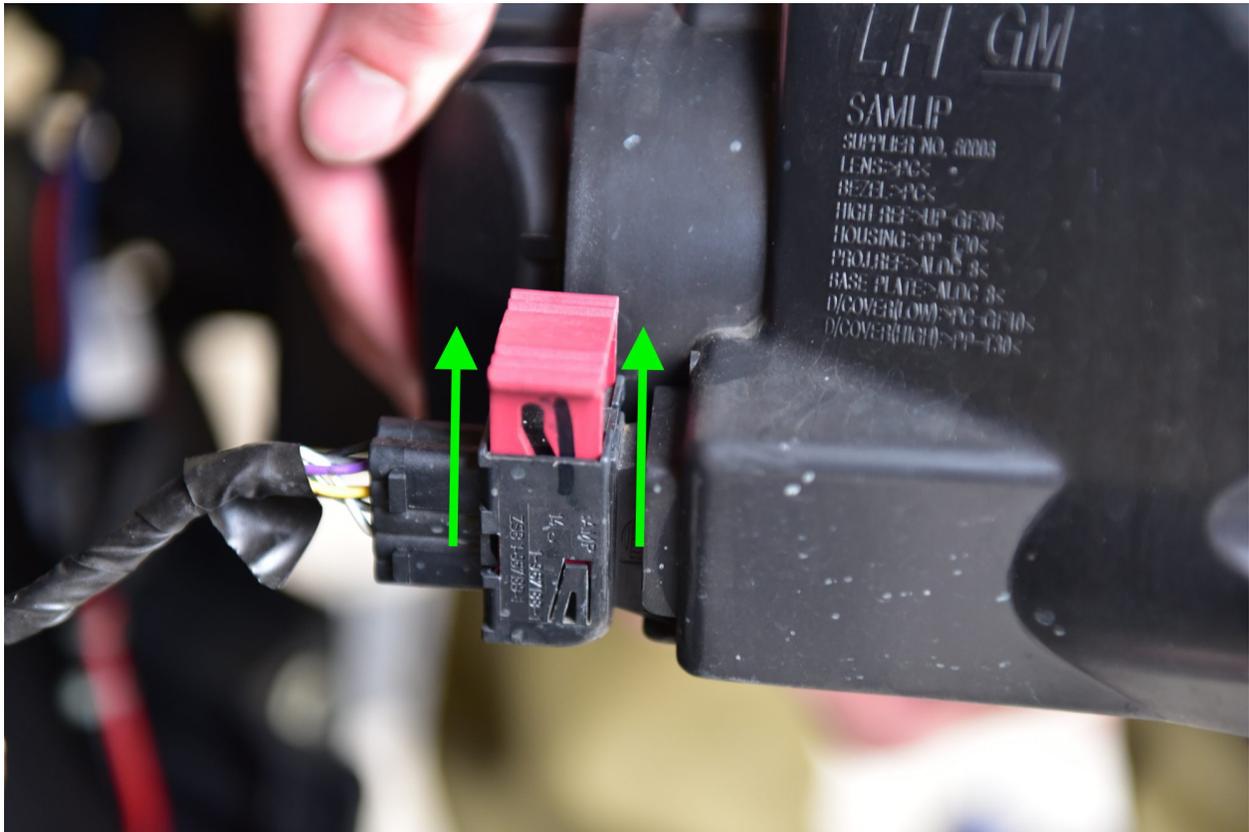

Step 7

The headlight is now removed from the vehicle. Upon re-installation ensure the headlight is correctly lining up with the fender panel as there is some adjustment capability in the bolts.



Sourcing From: AutoInstruct

<https://www.autoinstruct.com.au/manufacture/holden/ve-commodore/removing-headlights/>